


# Bohemian Post Light Instructions

## Materials Needed:

- Power Drill with 7/16" drill bit
- Phillips Head Screwdriver
- Hammer

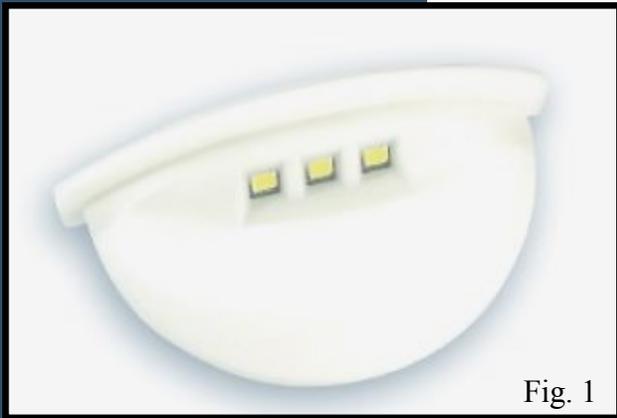

① Install the power supply with the instructions given.

② Turn the system on by unplugging the photo eye micro-connector from the power supply)

③ Measure and mark light location. (Most center the light with the handrail.)

④ Center and level the back of the light on the post. Mark 2 holes for screws and top notch (As seen in Fig. 2) **\*\*Do not remove double back tape on the back plate at this time.\*\***

⑤ Drill a 7/16" hole in the post where the top notch has been marked. Insert the fixture lead into the 7/16th hole and allow the fixture to hang.

⑥ Remove the double back tape on the fixture plate and adhere the plate to the post (As seen in Fig. 3).Screw the plate into place with the screws provided.

500 Principio Parkway W.  
Unit 300  
North East, MD 21901

(410) 287-3232  
sales@ilightingLED.com  
www.ilightingLED.com

# Bohemian Post Light Instructions

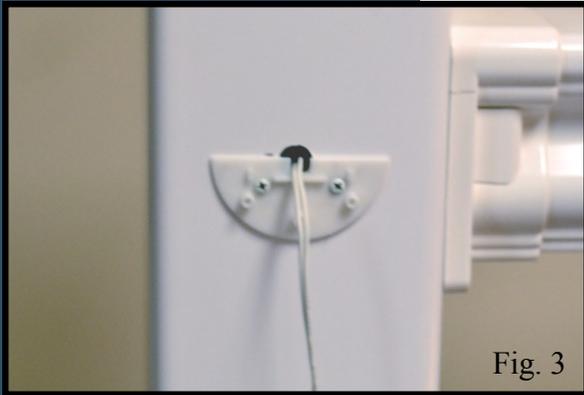


Fig. 3

7 Connect the light to the 60" lead to confirm the light working PRIOR to snapping the front onto the back (As seen in Fig 4).

8 Ensure the top cap is installed on the light by placing the cap over the two latches and pressing down and sliding the cap forward.



Fig. 4

9 Once light is confirmed to be working, slide light onto back portion and snap into place. **\*\*Once fully installed, light cannot be removed without breaking\*\***

10 Continue to connect all the post lights by plugging together each T-cable.

11 Use the wire staples to attach the wiring to the underside of the stairs.

12 Reconnect the photo eye when installation is complete.

500 Principio Parkway W.  
Unit 300  
North East, MD 21901

(410) 287-3232  
sales@ilightingLED.com  
www.ilightingLED.com

**\*\*\*To ensure a water tight seal, push connectors together.\*\*\***