


Bohemian Stair Light Kit Instructions

Materials Needed:

- Power Drill with 7/16" drill bit
- Phillips Head Screwdriver
- Hammer

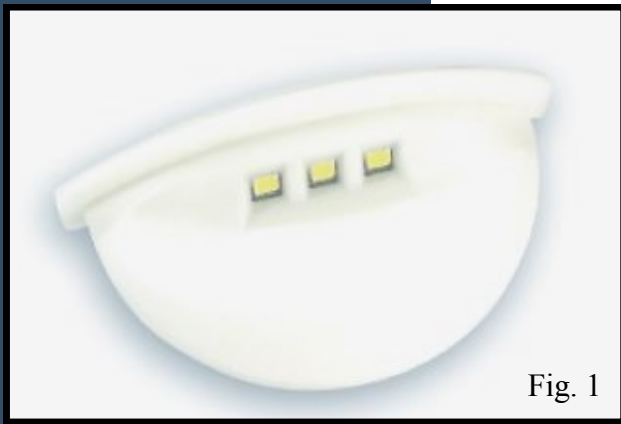

- 1 Plug the power cord into a 110 outlet.
- 2 Connect the first T-cable into the power supply output lead .
- 3 Locate and mark light location on riser.
- 4 Center and level the back of the light on the riser. Mark 2 holes for screws and top notch ****Do not remove double back tape on the back plate at this time.****
- 5 If not using the top cap cut notches off top of light to allow fixture to be installed under riser.
- 6 Drill a 7/16" hole in the riser where the top notch has been marked. Allow the light fixture to hang through the hole.
- 7 Remove the double back tape on the fixture plate and adhere the plate to the post (As seen in Fig. 3).Screw the plate into place with the screws provided.

500 Principio Parkway W.
Unit 300
North East, MD 21901

(410) 287-3232
sales@ilightingLED.com
www.ilightingLED.com

Bohemian Stair Light Instructions



Fig. 3

8 Ensure the top cap is installed on the light by placing the cap over the two latches and pressing down and sliding the cap forward.

9 Connect the light to the T-cable to confirm the light working PRIOR to snapping the front onto the back.



Fig. 4

10 Once light is confirmed to be working, slide light onto back portion and snap into place. ****Once fully installed, light cannot be removed without breaking****

11 Continue to connect all the stair lights by plugging together each T-cable.

12 Use the wire staples to attach the wiring to the underside of the stairs.

*****To ensure a water tight seal, push connectors together.*****

500 Principio Parkway W.
Unit 300
North East, MD 21901

(410) 287-3232
sales@ilightingLED.com
www.ilightingLED.com