


# Post Light Instructions

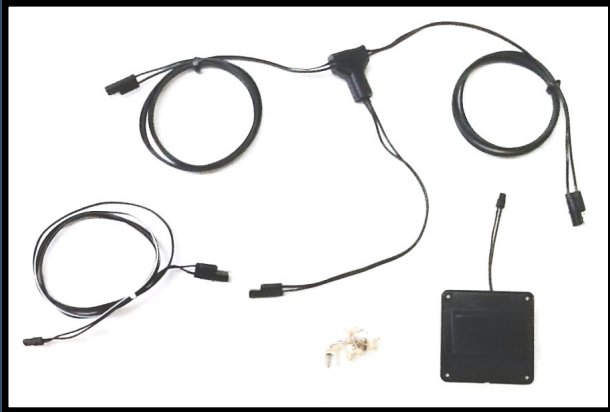

## Materials Needed:

Power Drill with 7/16" drill bit  
Phillips Head Screwdriver  
Hammer

500 Principio Parkway W.  
Unit 300  
North East, MD 21901

(410) 287-3232  
sales@ilightingLED.com  
www.ilightingLED.com

- 1 Install the power supply with the instructions given.
- 2 Turn the system on by removing the photo eye (unplug the photo eye micro-connector from the power supply)
- 3 Locate and drill a 7/16" hole in the post sleeve where the light will be mounted.
- 4 Slide the post sleeve over the post with the larger plug hanging out of the bottom or under the deck.
- 5 Plug the 60" lead from the post under deck to the center lead of the T-cable.
- 6 Connect the power supply to the first post light's T-cable by plugging the black connectors together.
- 7 Continue to connect all the post lights together by plugging together each T-cable.
- 8 Reconnect the photo eye when installation is complete.

**\*\*\*To ensure a water tight seal, push connectors together.\*\*\***